

WINTER STORAGE TIPS

To guarantee battery functionality and service life, it is very important to fully charge the robotic lawnmower before storing it away for the winter. Place the robotic lawnmower in the charging station until the battery icon in the display shows that the battery is fully charged. Then set the main switch to off.

Check the condition of wear items such as blades and bearings in the front wheels. Rectify if necessary, to make sure the robotic lawnmower is in good condition prior to next season. Store the robotic lawnmower in a dry and frost-free environment. A wall hanger produced especially for Automower® robotic lawnmower and charging station is available as an accessory. The wall hanger is perfect for winter storage. Contact your us for more information.

Store the charging station and power supply indoors. The boundary wire and the guide wire can be left in the ground. The ends of the wires should be protected from damp by connecting them to an original coupler or putting them in a container with dielectric grease, for instance. If it is not possible to store the charging station indoors, the charging station should be connected to the main power supply, the boundary wire and the guide wires should also be connected the entire winter.

